FUNMOUNT

使用说明书

手机外置闪光灯

产品型号： FM-FLASH F1

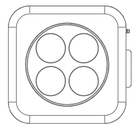

www.funmount.com　wechat　facebook

感谢您选购本产品！
为充分发挥其性能并确保安全使用，请在使用前仔细阅读本说明书。

如果您在使用过程中遇到任何问题，您可以联系当地经销商或官方渠道。
相关产品使用指南或常见问题，也可以通过官网、微信公众号或facebook获取相应信息。

一、 产品概述

本产品是一款专为智能手机设计的外置摄影补光设备。它创新性地可以同步iphone、android手机拍照的爆闪模式，闪光亮度远大于手机自带闪光灯，带聚光功能，高GN指数，高显指，更大发挥手机在弱光暗光、逆光、强光对比，需要突出细节和强化质感等环境下的照片质量。常亮模式可以当作补光灯。具备磁吸方式，可以方便各种角度安装，带1/4螺母，可以通过冷靴装配到微单相机，或者装配到各种支架做补光灯。自带屏幕可调节闪光灯参数，内置大容量锂电池，可通过type-c充电。

二、 装箱清单

开箱后，请检查是否包含以下组件：

磁吸闪光灯 x1	金属引磁片 x1	说明书 x1
柔光罩 x1	充电线 x1	

三、 外观介绍

四、 屏幕显示说明

主界面显示状态说明：

1. 电量：4格、3格、2格、1格分别对应电量100%、75%、50%、25%。
2. 蓝牙连接状态：分别代表有手机连接，无手机连接。
3. 当前主页功能与参数：显示当前的功能图标和功能的参数值。
4. 上页主页功能：显示往前翻页的主页功能。
5. 下页主页功能：显示往后翻页的主页功能。

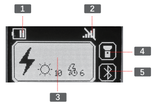

参数设置界面状态说明：

1. 选择框：选择想要操作的参数。
2. 选中状态：参数值进入可改变状态。

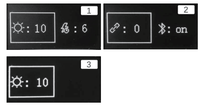

1. 闪光灯参数设置界面：闪光灯亮度参数，闪光灯持续时间。
2. 蓝牙设置页面：蓝牙连接数目，蓝牙状态。
3. 补光灯参数设置界面：补光灯亮度参数。

1. 在框选中蓝牙连接数目后长按多功能按键四秒后清除配对信息。
2. 清除配对信息成功界面。

五、功能操作说明

1. 关机状态下长按独立按键3秒开机，开机后默认进入主界面。
2. 主界面状态下，长按独立按键3秒关机。
3. 开机后闪光灯默认蓝牙打开，可在手机蓝牙设置中连接闪光灯，蓝牙扫描设备名称：FM-FLASH_XXXX，连接成功后主界面显示连接状态。
4. 闪光灯蓝牙连接手机后，触发闪光灯工作时能同步触发手机拍照。
5. 在主界面状态下，单击独立按键可分别单次触发闪光灯，或者开关常亮灯。
6. 模式切换：在开机后主界面上，左右按动多功能按键，分别可选择闪光灯，常亮灯，蓝牙配置模式。
7. 闪光灯参数设置：在闪光灯模式，单击按下多功能按键，进入闪光灯参数设置，左右按动多功能按键可分别选择闪光灯亮度调节或闪光灯测光时长设置，单击电源键可返回主界面。
   a. 闪光灯亮度设置：选择闪光灯亮度调节，单击按下多功能按键选中，左右按动多功能按键可对亮度大小进行调节。
   b. 闪光灯测光时长设置：选择闪光灯测光时长调节，单击按下多功能按键选中，左右按动多功能按键可对测光时长大小进行调节。

8. 常亮灯参数设置：在常亮灯模式，单击按下多功能按键，进入常亮灯亮度参数设置， 选择常亮灯亮度调节，单击按下多功能按键选中，左右按动多功能按键可对亮度大小进行调节。
9. 使用Type-C充电线为闪光灯充电，电池非满电状态显示正在充电，满电状态显示已充满。充电时不能触发功能使用。

六、摄影技巧与创意用法

快速拆卸与切换：在手持拍摄和固定机位拍摄间切换时，只需轻松取下或吸附，无需反复拧紧、拧松螺丝。
带1/4螺母，可以通过冷靴装配到微单相机， 或者装配到各种支架做补光灯。
使用柔光罩： 磁吸设计让安装和拆卸柔光罩变得更加快捷，根据场景随时切换硬光与柔光。

七、保养与维护

保持闪光灯底部和磁吸环的清洁，避免灰尘和金属碎屑影响磁吸力和连接稳定性。
请远离心脏起搏器等其他对磁场敏感的医疗设备。
避免与信用卡、酒店门卡等磁条卡或RFID卡片直接接触，以防消磁。

八、产品保修声明

尊敬的用户：
感谢您选用本公司的产品 ，请详细阅读保修声明的内容 ，保障您的下列权益：

1. 凭此卡享受保修期内的免费维修及保修期外的优惠服务。
2. 用户自购买之日起出现产品质量问题，可依法及本条款享受退、换及免费维修等政策。敬请注意，下列情况不在产品保证及保修服务范围：
   a. 超出规定的保修期限的；
   b. 因误用、意外、改装、不适当的物理或操作环境、自然灾害、电源及不当维护或保管导致的故障或损坏；
   c. 第三方产品、软件、服务或行为导致的故障或损坏；
   d. 产品使用过程中发生的正常损色、擦损和消耗；
   e. 产品可以不间断或无错误地正常运行；
   f. 不能出示产品有效保修凭证和有效原始购物发票或收据，产品原序列号标签有涂改、替换、撕毁的现象或产品保修凭证上的产品型号与产品实物不相符合的；
   g. 未按照附的说明，操作手册使用产品，或者产品未用于预定功能或环境，本公司经证实后确定损坏是由于操作手册的任何其他情况；
   h. 产品的齐备性和外观状态不属于保证范围，您应在接受产品时当场检验并对任何不符提出异议。

检验合格

FUNMOUNT

User Manual

External flash for mobile phone

Product Model: FM-FLASH F1

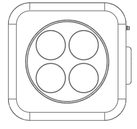

www.funmount.com　wechat　facebook

Thank you for purchasing this product! To fully utilize its performance and ensure safe use, please read this instruction manual carefully before use.

If you encounter any problems during use, you can contact local dealer or official channels.
For related product usage guides or FAQs, you can also be obtained through the official website, WeChat public account or Facebook as below .

1. Product Overview

This product is an external fill light designed specifically for smartphones. It innovatively synchronizes with the burst flash mode of iPhones and Android phones, boasting flash brightness far exceeding that of the phone's built-in flash. It also features a focusing function , a high GN index, and a high CRI, maximizing the quality of photos taken in low-light conditions, backlighting , strong contrast, and when highlighting details and textures are crucial . In constant-on mode, it can be used as a fill light . Its magnetic mounting allows for convenient mounting at various angles . With a 1/4" nut, it can be attached to a mirrorless camera via a cold shoe or various mounts for use as a fill light . The built-in screen allows for adjustable flash parameters and the high-capacity lithium battery is rechargeable via Type - C.

2. Packing List

After unpacking, please check whether the following components are included:

Magnetic flash lightx1	Soft Light Coverx1
metal magnetx1	Charging Cablex1
instruction manualx1	

3. Appearance

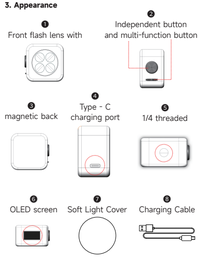

4. Screen display instructions

Main interface display status description:

1. Battery level: 4 bars, 3 bars, 2 bars, and 1 bar correspond to 100%, 75%, 50%, and 25% of battery level respectively.
2. Bluetooth Connection status: indicates whether the phone is connected or not.
3. Current home page functions and parameters: Displays the current function icon and function parameter values.
4. Previous page homepage function: Displays the homepage function for turning the page forward.
5. Next page homepage function: Display the homepage function for turning the next page.

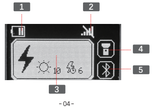

Parameter setting interface status description:

1. Selection box: Select the parameter you want to operate.
2. Selected state: The parameter value becomes changeable.

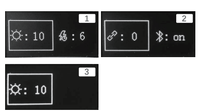

1. Flash parameter setting interface: flash brightness parameters, flash duration.
2. Bluetooth settings page: Number of Bluetooth connections, Bluetooth status.
3. Fill light parameter setting interface: Fill light brightness parameters.

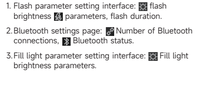

1. After selecting the number of Bluetooth connections in the box, press and hold multi-function button for four seconds to clear the pairing information.
2. Clear the pairing information successfully interface.

5. Functional operation instructions

1. When the device is powered off , press and hold the independent button for 3 seconds to power it on. The device will enter the main interface by default after powering on .
2. In the main interface state, press and hold the independent button for 3 seconds to shut down.
3. 3. The flash's Bluetooth is enabled by default after powering on the device. You can connect the flash in your phone's Bluetooth settings. Scan for the device name: FM-FLASH_XXXX. The connection status will be displayed on the main screen after a successful connection.
4. After the flash is connected to your phone via Bluetooth, triggering the flash will also trigger the phone to take photos.
5. In the main interface, click the independent button to trigger the flash light or turn the continuous light on or off .
6. Mode switch: On the main interface after powering on, toggle the multi-function button left or right to select flash light, continuous light , and Bluetooth configuration mode respectively.
7. Flash parameter settings: In flash mode, press the multi-function button to enter the flash parameter settings. Move the multi-function button left or right to select flash brightness adjustment or flash metering duration setting respectively. Press the power button to return to the main interface .
   a. Flash brightness setting : Select flash brightness adjustment, press the multi-function button to select, and move the multi-function button left or right to adjust the brightness
   b. Flash metering duration setting : Select the flash metering duration adjustment, press the multi-function button to select, and move the multi-function button left or right to adjust the metering duration.

8. Constant light parameter setting: In constant light mode, click and press the multi-function button to enter the constant light brightness parameter setting. Select the brightness adjustment of the constant light, press the multi-function button to select it, and slide the multi-function button left or right to adjust the brightness
9. Use the Type-C charging cable to charge the flash. The battery status will show "charging" when it is not fully charged, and "full" when it is fully charged . The function cannot be triggered during charging.

6. Photography tips and creative uses:

Quick disassembly and switching: When switching between handheld shooting and fixed-camera shooting, just easily remove or attach it without repeatedly tightening and loosening screws.
With 1/4 nut, it can be mounted on a micro single camera through a cold shoe, or mounted on various brackets as a fill light .
Using the diffuser: The magnetic design makes it quick and easy to install and remove the diffuser, allowing you to switch between hard and soft light at any time according to the scene.

7. Care and maintenance

Keep the bottom of the flash and the magnetic ring clean to prevent dust and metal debris from affecting the magnetic attraction and connection stability.
Please keep away from pacemakers and other medical devices that are sensitive to magnetic fields.
Avoid direct contact with magnetic stripe cards or RFID cards such as credit cards and hotel key cards to prevent demagnetization.

8. Product Warranty Statement

respected user:
Thank you for choosing our company's products, please read the content of the warranty statement in detail to protect your following rights and interests:

1. With this card, you can enjoy free warranty within the warranty period and some preferential services outside the warranty period.
2. Users who have product quality problems from the date of purchase can enjoy policies such as return, replacement and free maintenance according to the law and this clause. Please note that the following situations are not within the scope of product guarantee and warranty service:
   a. Beyond the stipulated warranty period;
   b. Failure or damage caused by misuse, accident, modification, unsuitable physical or operating environment, natural disasters, power surges, and improper maintenance or storage;
   c. Failure or damage caused by third-party products, software, services or actions;
   d. Normal discoloration, wear and tear that occurs during product use;
   e. the product will function without interruption or error;
   f. Failure to produce a valid product warranty certificate and a valid original purchase invoice or receipt, the original serial number label of the product has been altered, replaced, or torn, or the product model on the product warranty certificate does not match the actual product;
   g. Failure to use the product in accordance with the accompanying instructions, the operation manual, or the product not being used for the intended function or environment, any other situation where the company, after verification, determines that you have violated the operation manual.
   h. The completeness and appearance of the product are not guaranteed, and you should inspect the product on the spot and raise an objection to any discrepancy when you accept the product.

Qualified